

All ASI products are designed and manufactured to high quality standards to ensure many years of satisfactory service. To assure long life and beauty, products should be cleaned, protected, and maintained as described below. Maintenance methods varying from the below may forfeit any user/owner claims to warranty.

**Cleaning instructions by material:**

**Forbo® Cork Backing**

Dust, light dirt, or markings may be removed with a damp cloth or sponge using a liquid detergent in clear water, then rinsed with clear water. Light abrasive marks may be improved in appearance by applying a light coat of lemon oil.

**Lockable Glass Doors**

Use a glass cleaner and dry with paper towel.

**Natural Cork Backing**

Dust marks should be removed by a vacuum cleaner. Finger marks or light dirt spots may be removed with a pink (soft) pencil eraser - use pressure as you would to erase pencil marks from paper. In cases where stains are impossible to eradicate, this material will accept a latex based paint as cover.

**White Board Backing**

All new boards should be cleaned with clear water to eliminate all handling marks prior to initial use. Periodically, depending on usage, the writing surface should be cleaned with a mild household detergent (avoid abrasive cleaners). Rinse with clear water and dry with a clean cloth or paper towel.

Use only dry-erase marking pens formulated for use on markerboards. These are the only pens totally compatible to the white porcelain enamel surface. Should unspecified pens be used with unfavorable results, the boards will have to be cleaned thoroughly, removing all foreign deposits with an ammonia based cleanser, then rinsed with clean water and towel dried.