

All ASI products are designed and manufactured to high quality standards to ensure many years of satisfactory service. To assure long life and beauty, products should be cleaned, protected, and maintained as described below. Maintenance methods varying from the below may forfeit any user/owner claims to warranty.

All new porcelain enamel markerboards should be cleaned with clean water to eliminate all handling marks prior to initial use. Periodically, depending on usage, the writing surface should be cleaned with a mild household detergent (avoid abrasive cleaners). Rinse with clear water and dried with a clean cloth or paper towel.

**Use only dry-erase marking pens formulated for use on markerboards.** These are the only pens totally compatible to the white porcelain enamel surface. **Do Not** use permanent markers on markerboards. Should unspecified pens be used with unfavorable results, the boards will have to be cleaned thoroughly, removing all foreign deposits with an ammonia based cleanser, then rinsed with clean water and towel dried.

If this method is not successful, please contact ASI Visual Display Products. Never use tape or adhesives on your marker board surface. These materials maybe difficult to remove, and may require professional removal

Please note: If using conventional chalk brush for erasing, please clean the brush regularly to avoid buildup of residue.