


RETROFIT BOARDS


WE'VE GOT IT COVERED INTRODUCING RETROFIT BOARDS

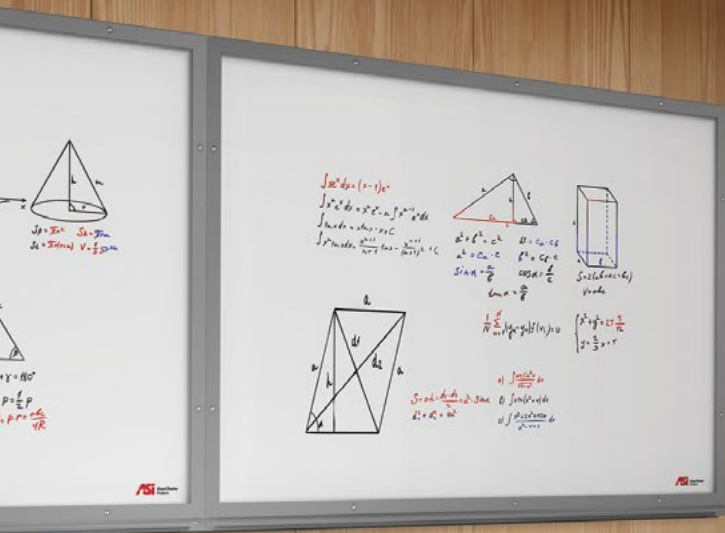


Retrofit boards can be easily mounted over previously installed framed boards without removing them. Installation can be done in minutes. This innovative board design, offers a perfect solution for covering existing boards.

ASI[®] *Visual Display Products*


INSTALLATION

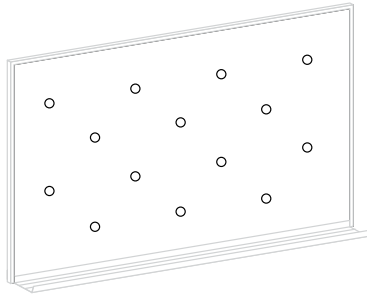

Prepare the surface of the existing board by thoroughly cleaning it of dirt, dust, or grease. Apply construction adhesive to the surface of the existing board in golf-ball size amounts every 16" in height and every 24" in length.

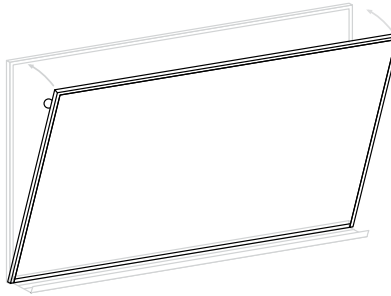

Position the new board carefully over existing board, and press firmly in the locations of the adhesive.

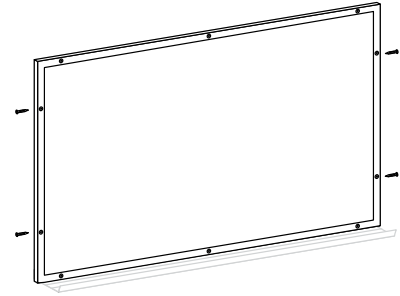


Install the self-tapping screws (supplied with the board) through the pre-drilled holes in the trim. Clean the board thoroughly before using. See markerboard care and maintenance instructions.

See a complete installation video at asi-visualdisplayproducts.com.

DETAILS

- Face panel: Polyvision e3 Ceramic Steel in low gloss standard or high gloss
- 1" aluminum trim face
- 1/4" substrate
- Factory drilled counter sunk holes
- To determine height, measure from the top of the existing board to the top of the existing tray
- To determine width, measure from the outside edge of the left side of existing board to the outside edge of the right side

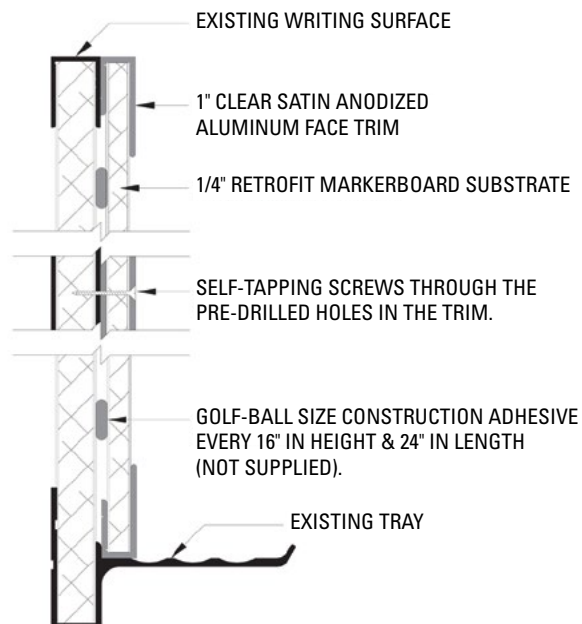

DIMENSIONS

Available in the following sizes:

Width: 3' to 12'

Height: 2' to 5'

ASI Visual Display Products

2301 East High Avenue New Philadelphia, OH 44663

Tel: 330.308.8667

Email: info@asi-visualdisplayproducts.com

Web: asi-visualdisplayproducts.com

©2025 ASI Visual Display Products, Inc., an ASI Group Company ASI0000100225b

ASI Group
Integrated Building Products