

YOU WILL NEED:



- Level
- Tape Measure
- Pencil
- Appropriate hardware for your wall type (not included)
- Drill/Electric Screwdriver
- Masking Tape

BOARD COMPATIBILITY:

- Frameless Glass
- Frameless Porcelain
- Fabric Wrapped Edge

INSTRUCTIONS:

Map Out Porcelain Board Placement On Wall


- 1 Apply masking tape to wall where the top of the tape is 3/8" above the desired top of the board. Use a level to ensure masking tape is level to space.

Important: the top edge of the masking tape will serve as your reference for measuring when installing the z-clips. The final top of the porcelain board will be 3/8" below the top of the tape.

- 2 Measure the width of top of the board. Use this measurement to mark the desired locations of the two vertical edges of the board on the wall.


Z-Clip Placement

- 3 Measure from the top of the board to the bottom of first z-clip to find wall clip placement height. Then measure the length of the z-clip to find its width.
- 4 On the wall, measure from the top of the masking tape to mark the z-clip's distance from the top of the board.
- 5 Measure from the side of the board to the end of the hanger bar. Measure in that distance from desired vertical edge of the board on the wall to mark the length of the z-clip. Draw a line level to the space to mark the overall horizontal placement of z-clip.
- 6 Repeat for each z-clip, measuring from the top of the board and masking tape each time.

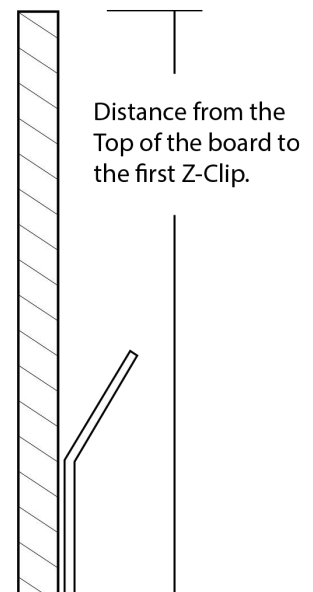

Install Wall Clips

- 7** Place z-clip on the wall with flat side facing the wall and the angled portion pointing up and away from the wall.
- 8** Align top of z-clips with marks on the wall, then mark screw holes.
- 9** Remove z-clips from the wall. Drill and place anchors as needed.
- 10** Attach z-clips with hardware appropriate to your wall type.

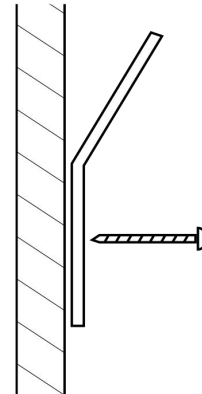

Verify Alignment and Spacing

- 11** Check to ensure each wall clip is level to space.
- 12** Verify dimensions between clips and overall placement of board.

Installing the Board onto the Wall

- 13** Place the board against the wall 2"-3" above desired location, then lower slowly until z-clips interlock.

